



To see the installation instructions in the form of a video, scan the QR code.

WONDERWALL
THE WORLD OF ART




INSTALLATION *INSTRUCTION*

Before you begin installation, read the information on the following pages. Follow the directions without skipping any steps.

Good luck!

1


CHECK THE WALLPAPER

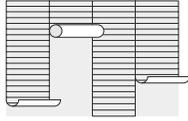

Before starting the installation, make sure that the delivered wallpaper conforms to your order. Unroll all the delivered wallpaper pieces on a flat surface and lay them side by side; check the consistency of the pattern, its colors, the dimensions of individual rolls, and whether there is any damage on the wallpaper pieces. If irregularities are found, file a complaint before you install the wallpaper.

2

PREPARE THE WALL

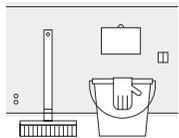

The entire surface of the wall should be smoothed, degreased, dried, cleaned, uniform and light in color, and primed twice with a deep penetrating primer. Prime the wall at least one day before the scheduled installation. Keep in mind that wallpaper installation should be the last stage of the renovation and the room where the wallpaper will be installed should be thoroughly cleaned.

Before installing the wallpaper, you should additionally:

1. Paint the adjacent walls; extend the paint from the adjacent walls a few millimeters on the wall where the wallpaper is to be installed.
2. Cover and thoroughly wash skirting boards or other items that require filling with acrylic. Applying acrylic on the surface after wallpaper installation can lead to its damage.

2


cd.

3. Install the sockets without the face plates.
4. Drill holes for the lighting or pictures.
5. Remove radiators and move furniture at least 1.5 m away from the wall.

Useful information: Fresh plaster or newly painted walls should be allowed to dry for about 3 weeks before you begin the wallpaper installation. The optimum temperature in the room where wallpaper is to be installed is about 18–25 °C. During the installation of wallpaper and at least 24 hours afterwards, do not air the room, use air conditioning, or allow rapid changes in temperature.

3

TOOLS & DEVICES

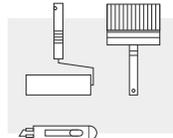


For installation, use professional products and tools such as:

- a primer (deep penetrating with fungicidal properties)
- an interlining wallpaper adhesive
- a clean and dry cloth
- a glue brush
- a glue roller
- a rubber wallpaper pressing roller (wide and narrow)
- a pencil
- a tape measure
- a squeegee
- a snap blade utility knife
- a spirit level

4

BEFORE THE INSTALLATION

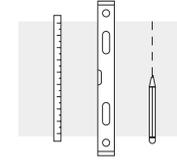


For accurate installation, measure and draw vertical lines on the wall or use a laser level. The standard width of our wallpaper pieces is 100 or 102 cm. When the wallpaper is ordered for a custom wall size, there may be pieces in the package with a smaller width, even 20 cm. The sections designated on the wall should correspond to the width of the individual wallpaper strips.

Our wallpapers are prepared for edge-to-edge installation. When installing a pattern on the wall, do not leave gaps between the pieces.

Useful information: We do not recommend joining wallpaper pieces in corners and wall edges. The wallpaper strips should be joined on a flat wall surface.

5

APPLY ADHESIVE ON THE WALL

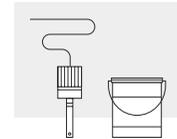


For the installation, use an adhesive specific for interlining wallpaper. The adhesive should be applied with a paint roller or brush directly on the substrate (wall, ceiling) starting from the left corner of the room. To avoid a leak of excess adhesive on the top layer of the wallpaper, apply a thin layer with a brush on the edges of the section. Apply the adhesive only to the surface of the wall; do not cover the wallpaper strips with it.

After installation, the adhesive dries completely after at least 24 hours. The optimal condition for drying is a constant temperature of 18–25 °C.

6

INSTALL THE WALLPAPER

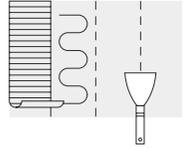

At the place on the wall where the adhesive has been applied, carefully, place a strip of the wallpaper along a vertical line drawn previously. Make sure the wallpaper is glued evenly and then smoothen the wallpaper using a wallpaper roller. The next panel should be glued so that the edges touch each other, and that there is no gap between the wallpaper pieces. Remember to match the patterns on adjacent strips. The joints between the edges of the individual strips should be smoothened with a rubber roller. If you soil the wallpaper with the adhesive near the edges, you should immediately wipe it off with a slightly dampened, clean, soft cloth. Do not allow the adhesive to dry on the top layer of the wallpaper.

Do not move the glued wallpaper, as this can lead to damage. If you place the wallpaper strip imprecisely, peel it off and repeat the application.

Additional information: Excess wallpaper should be cut off by using a metal putty knife to press the strip at the place of the cut and running the x-acto knife along its edge. The blade of the knife must be sharp; otherwise the wallpaper panel could be damaged.

That's all! Congratulations on the work well done!

WONDERWALL STUDIO

t: +48 577 555 864 e: info@wonderwall-studio.com